


Air Door Actuator / Motor: Service and Repair

Front Controls

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

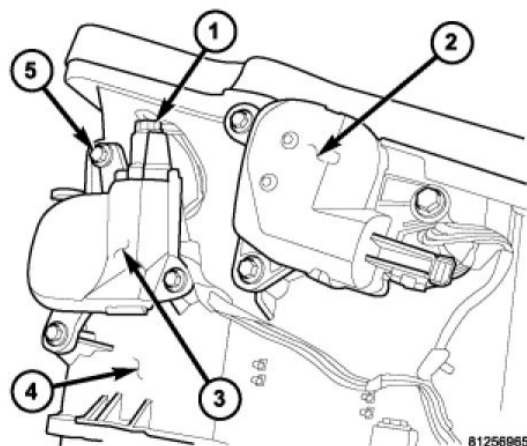

1. Disconnect and isolate the negative battery cable.
2. Remove the screws (5) that secure the panel door actuator (2) and the floor/defrost door actuator (3) located on the driver side end of the HVAC housing (4) as required.
3. Disconnect the HVAC wire harness connector (1) from the panel door actuator and the floor/defrost door actuator as required.
4. Remove the mode door actuator(s) from the HVAC housing.