





## 8W-63 POWER SEATS


<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Circuit Breaker-Power Seat	8W-63-4	Heated Seat-Right Middle Row	8W-63-13
Data Link Connector	8W-63-2, 4, 7	Instrument Cluster	8W-63-11
Door Module-Driver	8W-63-2, 3, 4, 9	Integrated Power Module	8W-63-2, 4, 7, 11
Door Module-Passenger	8W-63-7, 9	Memory/Heated Seat Adjustable Pedals Module	8W-63-2, 4, 5, 6, 7, 8, 10
Door Node Relay	8W-63-2	Power Seat Motor-Driver Front Riser	8W-63-4
Fuse 3	8W-63-2, 7	Power Seat Motor-Driver Horizontal	8W-63-5
Fuse 8	8W-63-4	Power Seat Motor-Driver Lumbar	8W-63-5
Fuse 40	8W-63-2	Power Seat Motor-Driver Rear Riser	8W-63-5
Fuse 41	8W-63-2	Power Seat Motor-Driver Recliner	8W-63-4
Fuse 44	8W-63-11	Power Seat Motor-Passenger Horizontal	8W-63-8
Fuse 46	8W-63-7	Power Seat Motor-Passenger Recliner	8W-63-8
Fuse 47	8W-63-2	Power Seat Switch-Driver	8W-63-3, 9
G300	8W-63-2	Power Seat Switch-Passenger	8W-63-7, 9
G301	8W-63-4, 7, 11, 13	Run Relay	8W-63-2, 7, 11
Heated Seat Back-Driver	8W-63-10	Seat Heater Interface Module	8W-63-11, 12, 13
Heated Seat Back-Passenger	8W-63-10	Seat Position Sensor-Driver Front Riser	8W-63-6
Heated Seat Cushion-Driver	8W-63-10	Seat Position Sensor-Driver Horizontal	8W-63-6
Heated Seat Cushion-Passenger	8W-63-10	Seat Position Sensor-Driver Rear Riser	8W-63-6
Heated Seat Switch-Left Middle Row	8W-63-11, 12	Seat Position Sensor-Driver Recliner	8W-63-6
Heated Seat Switch-Right Middle Row	8W-63-11, 12		
Heated Seat-Left Middle Row	8W-63-13		

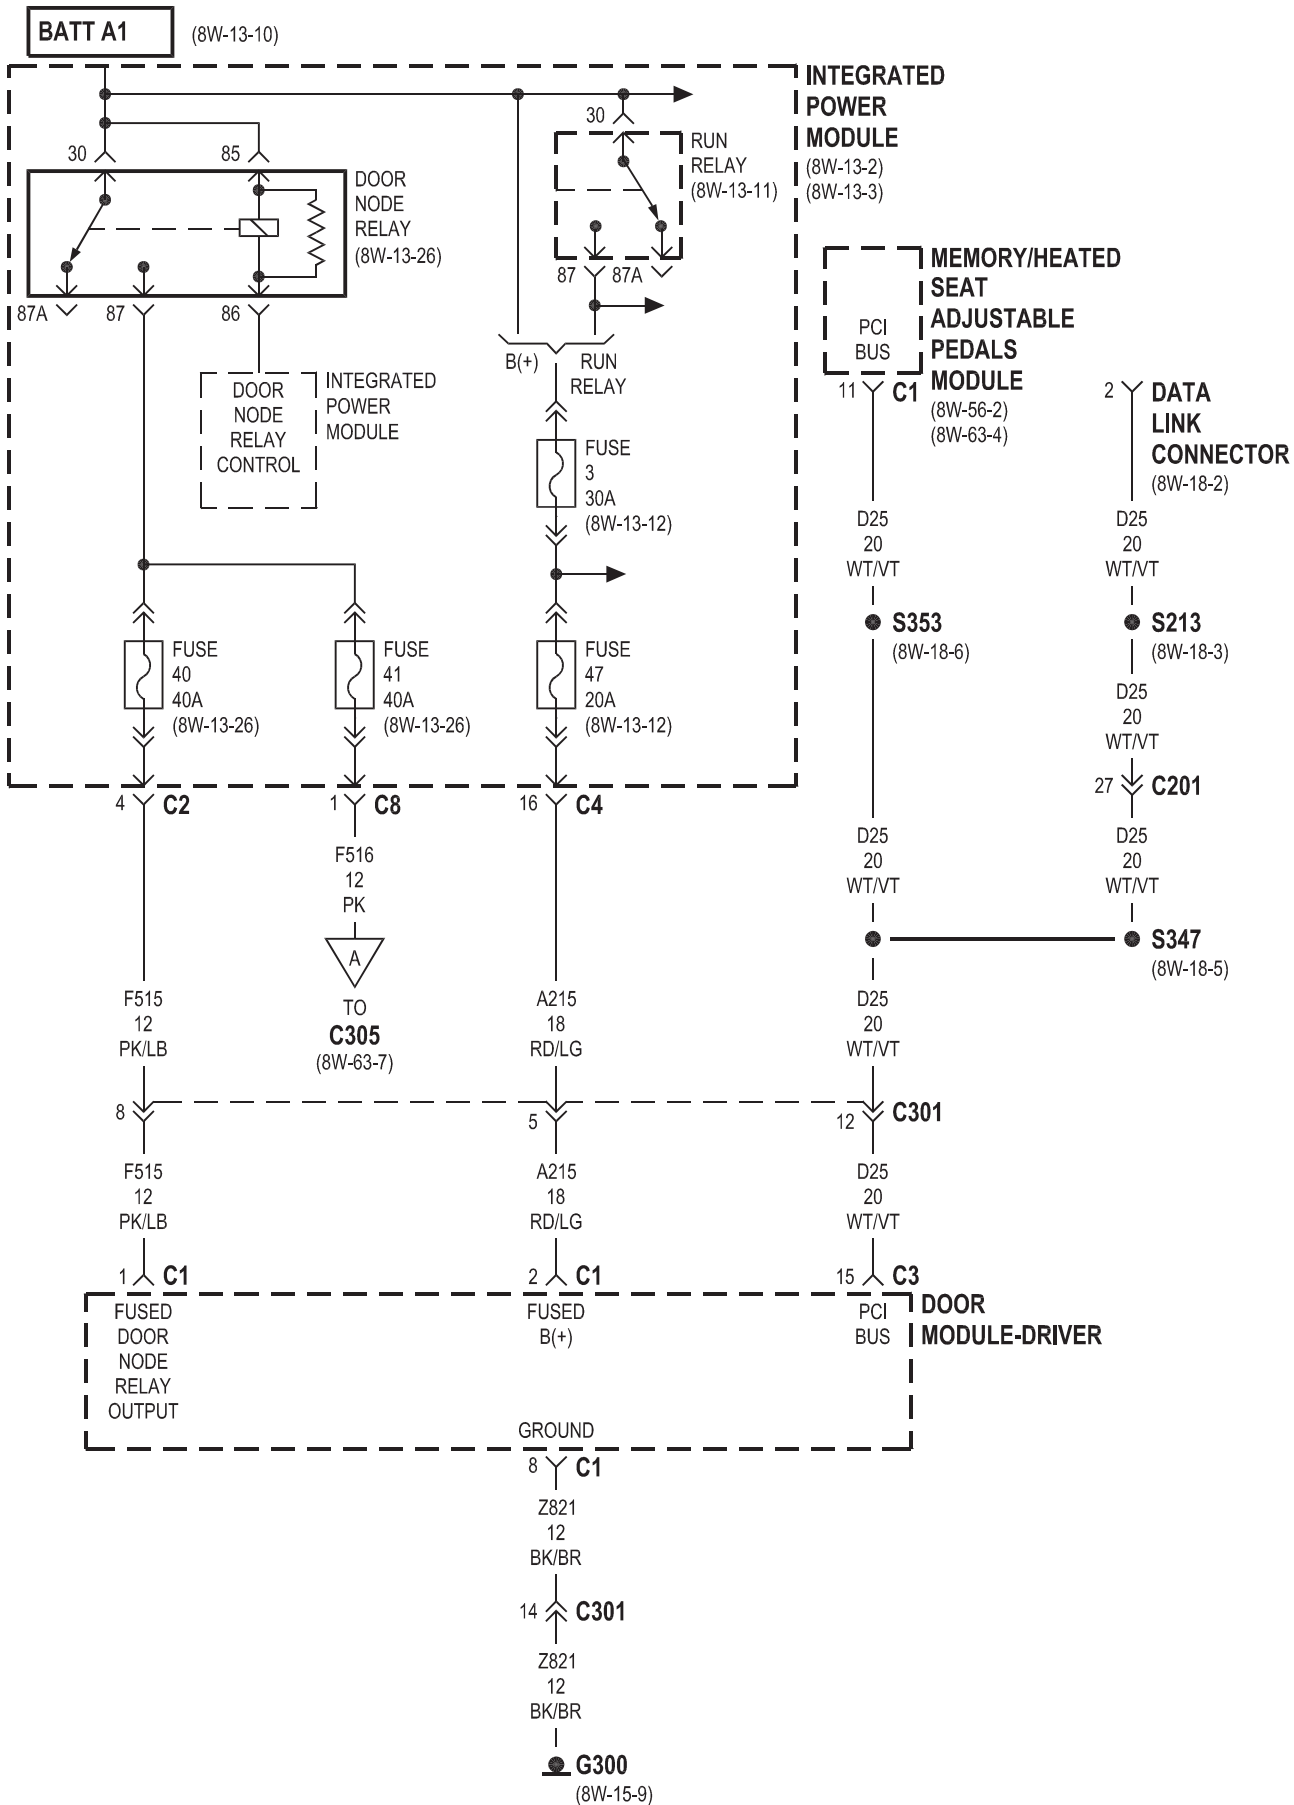


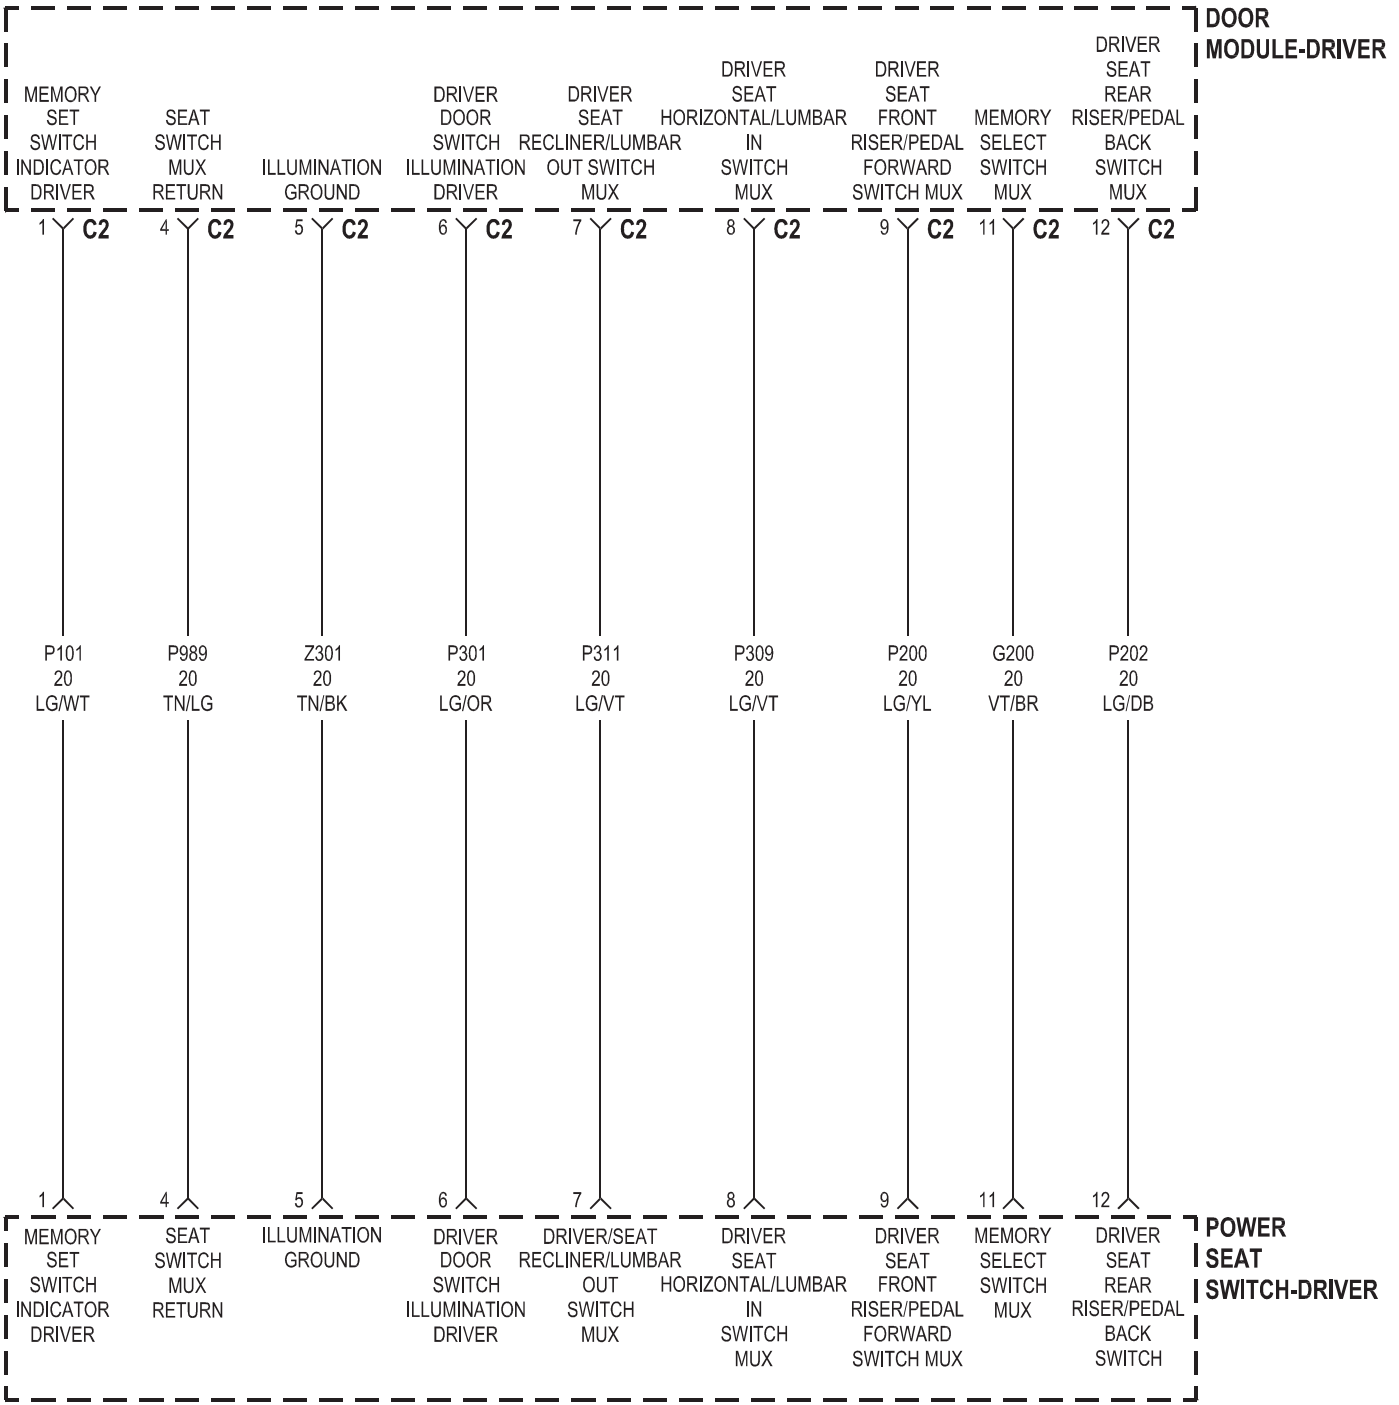


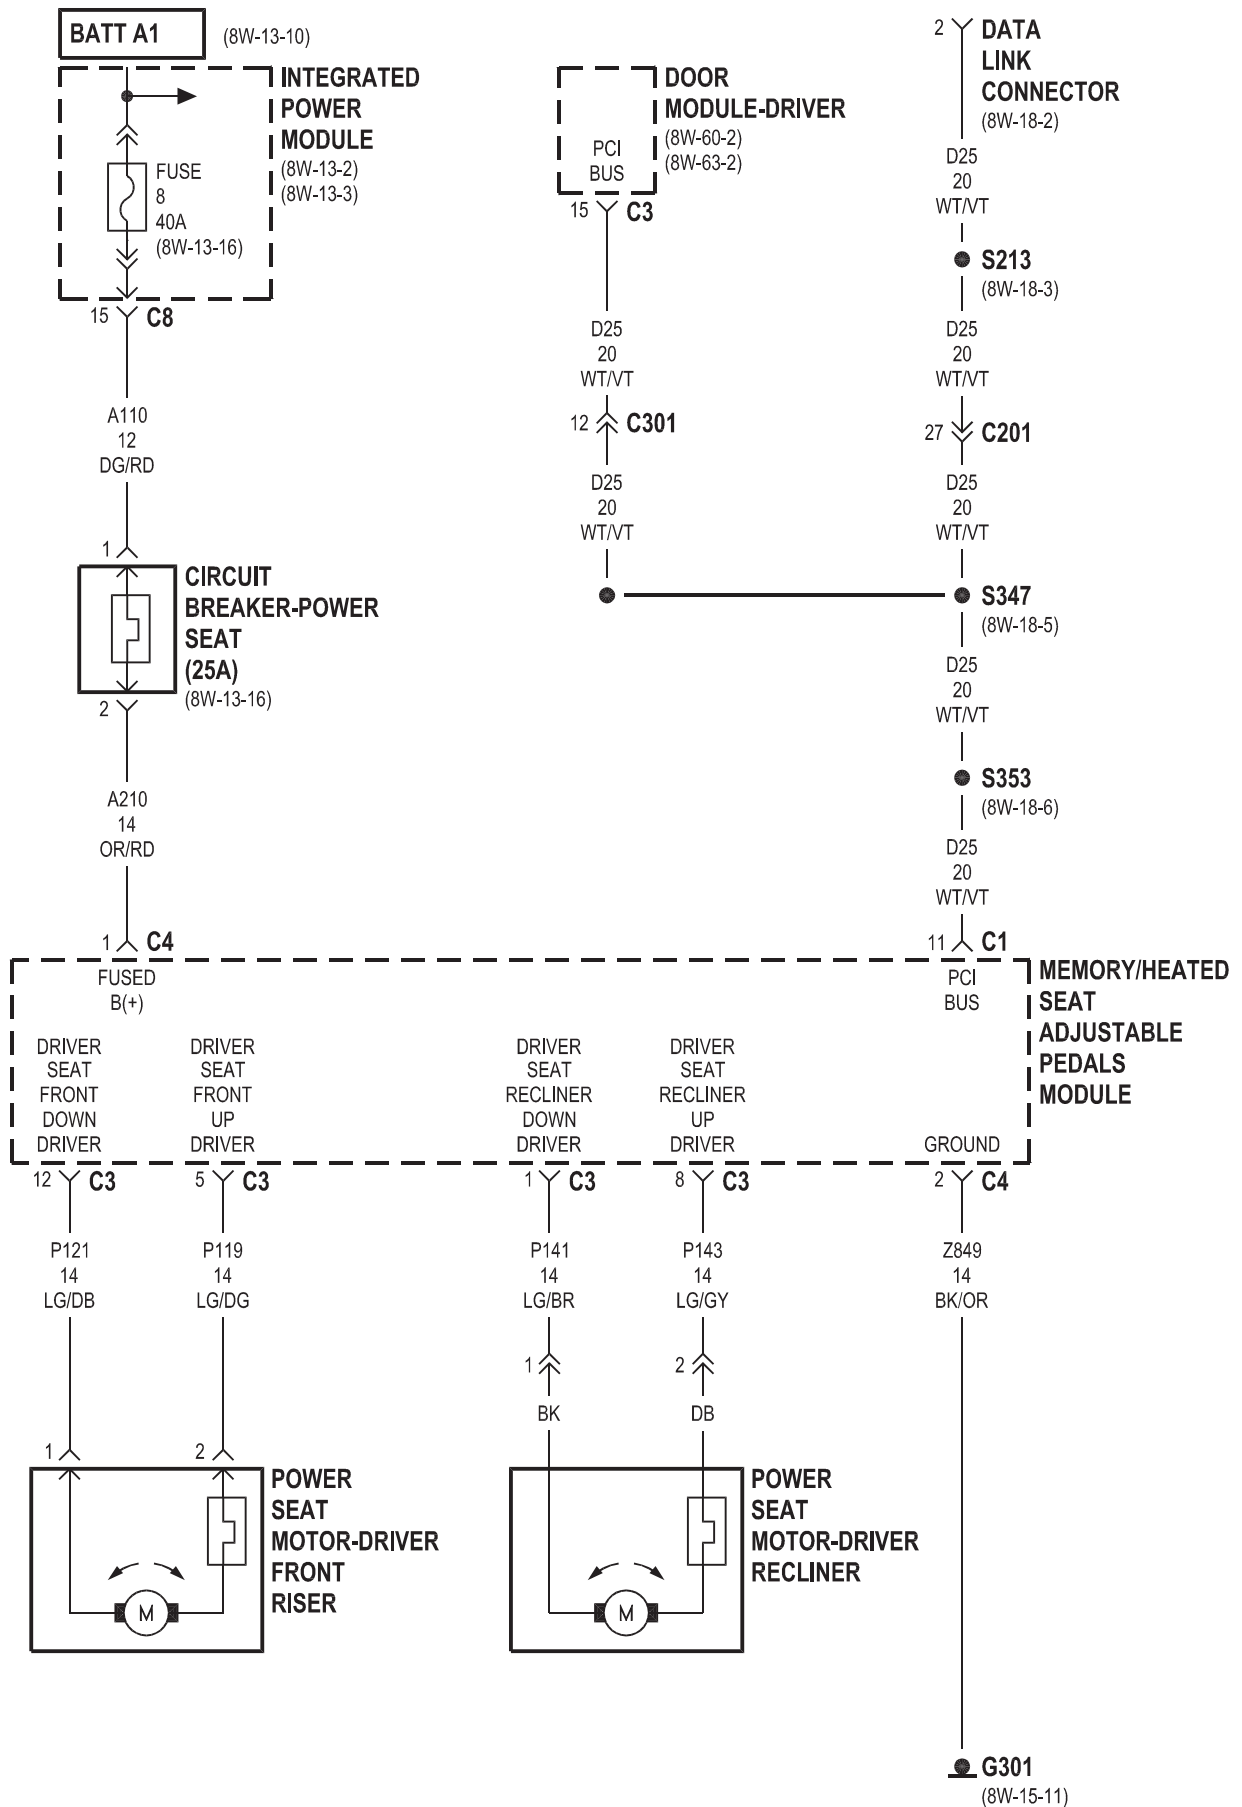

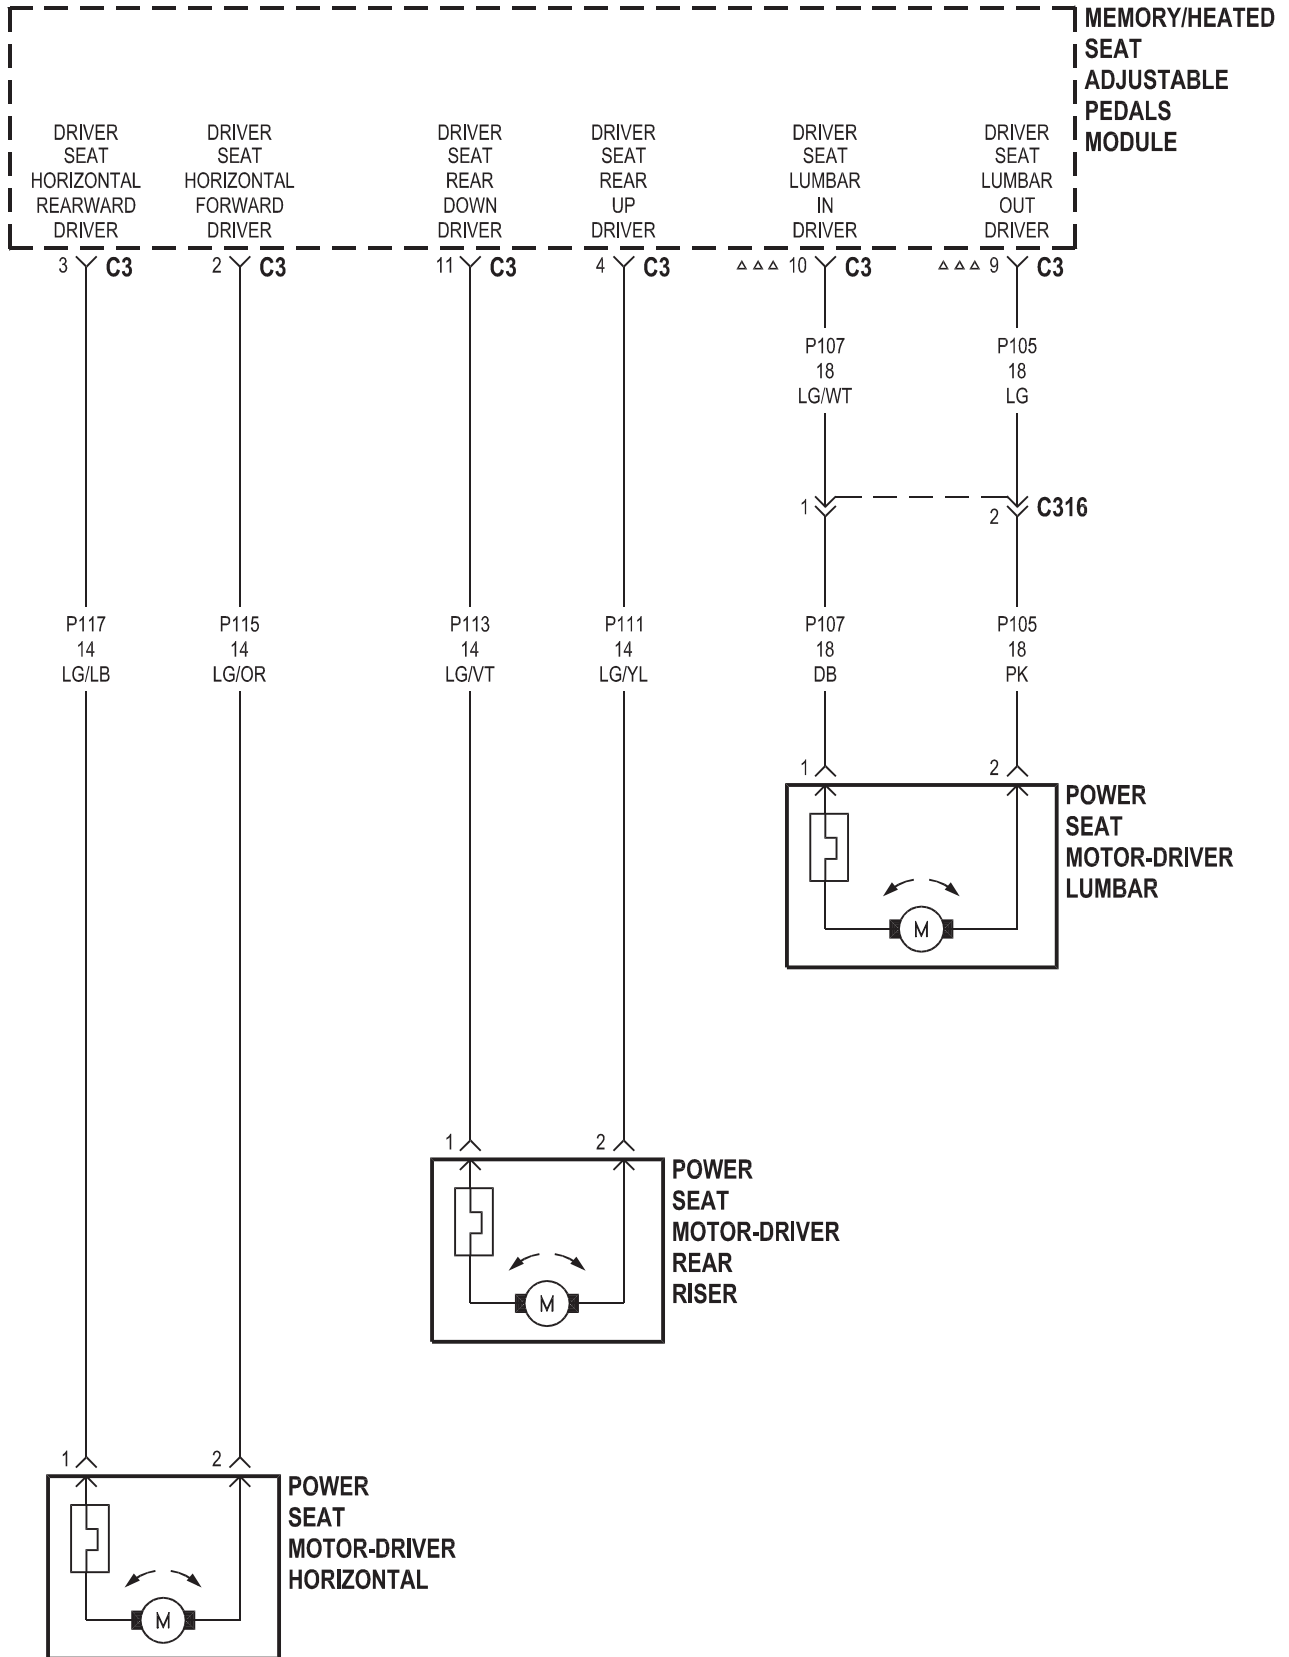

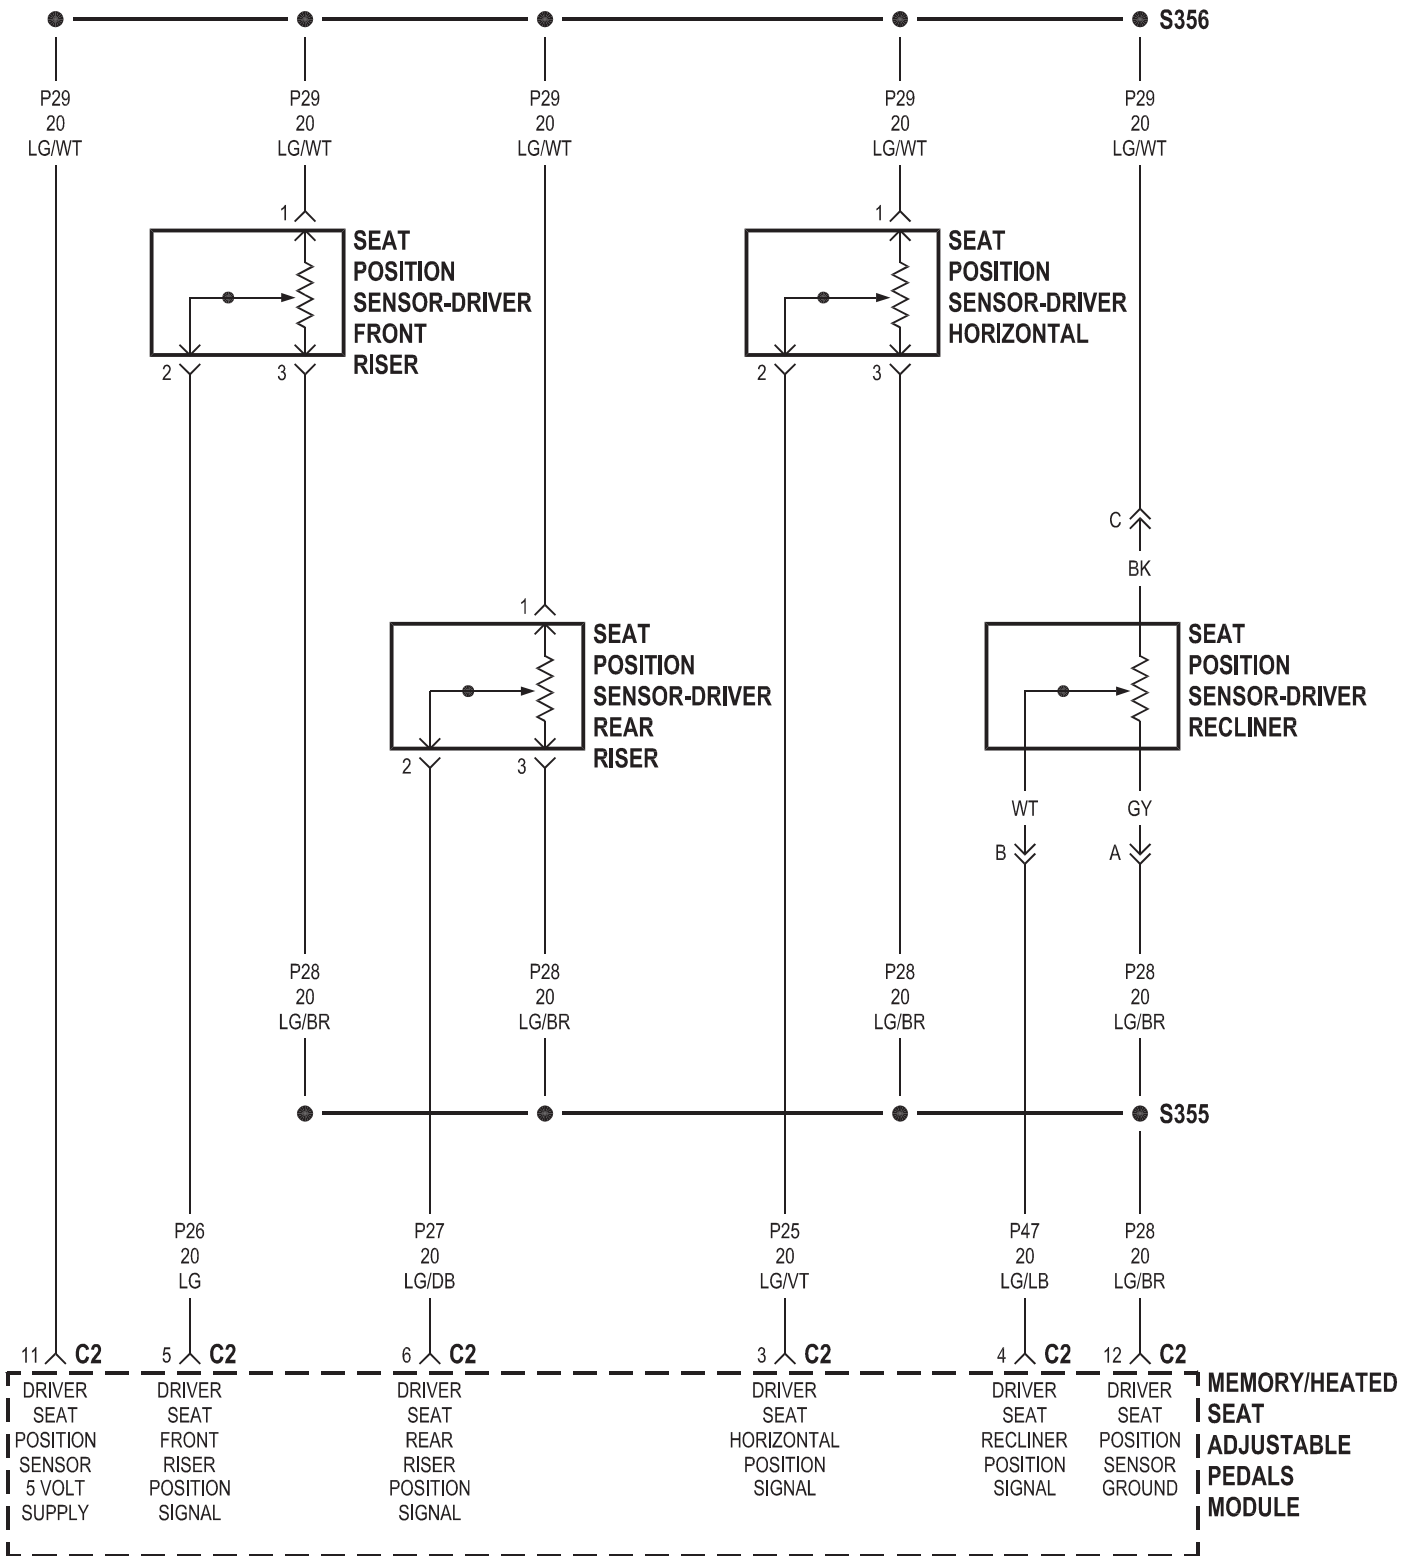


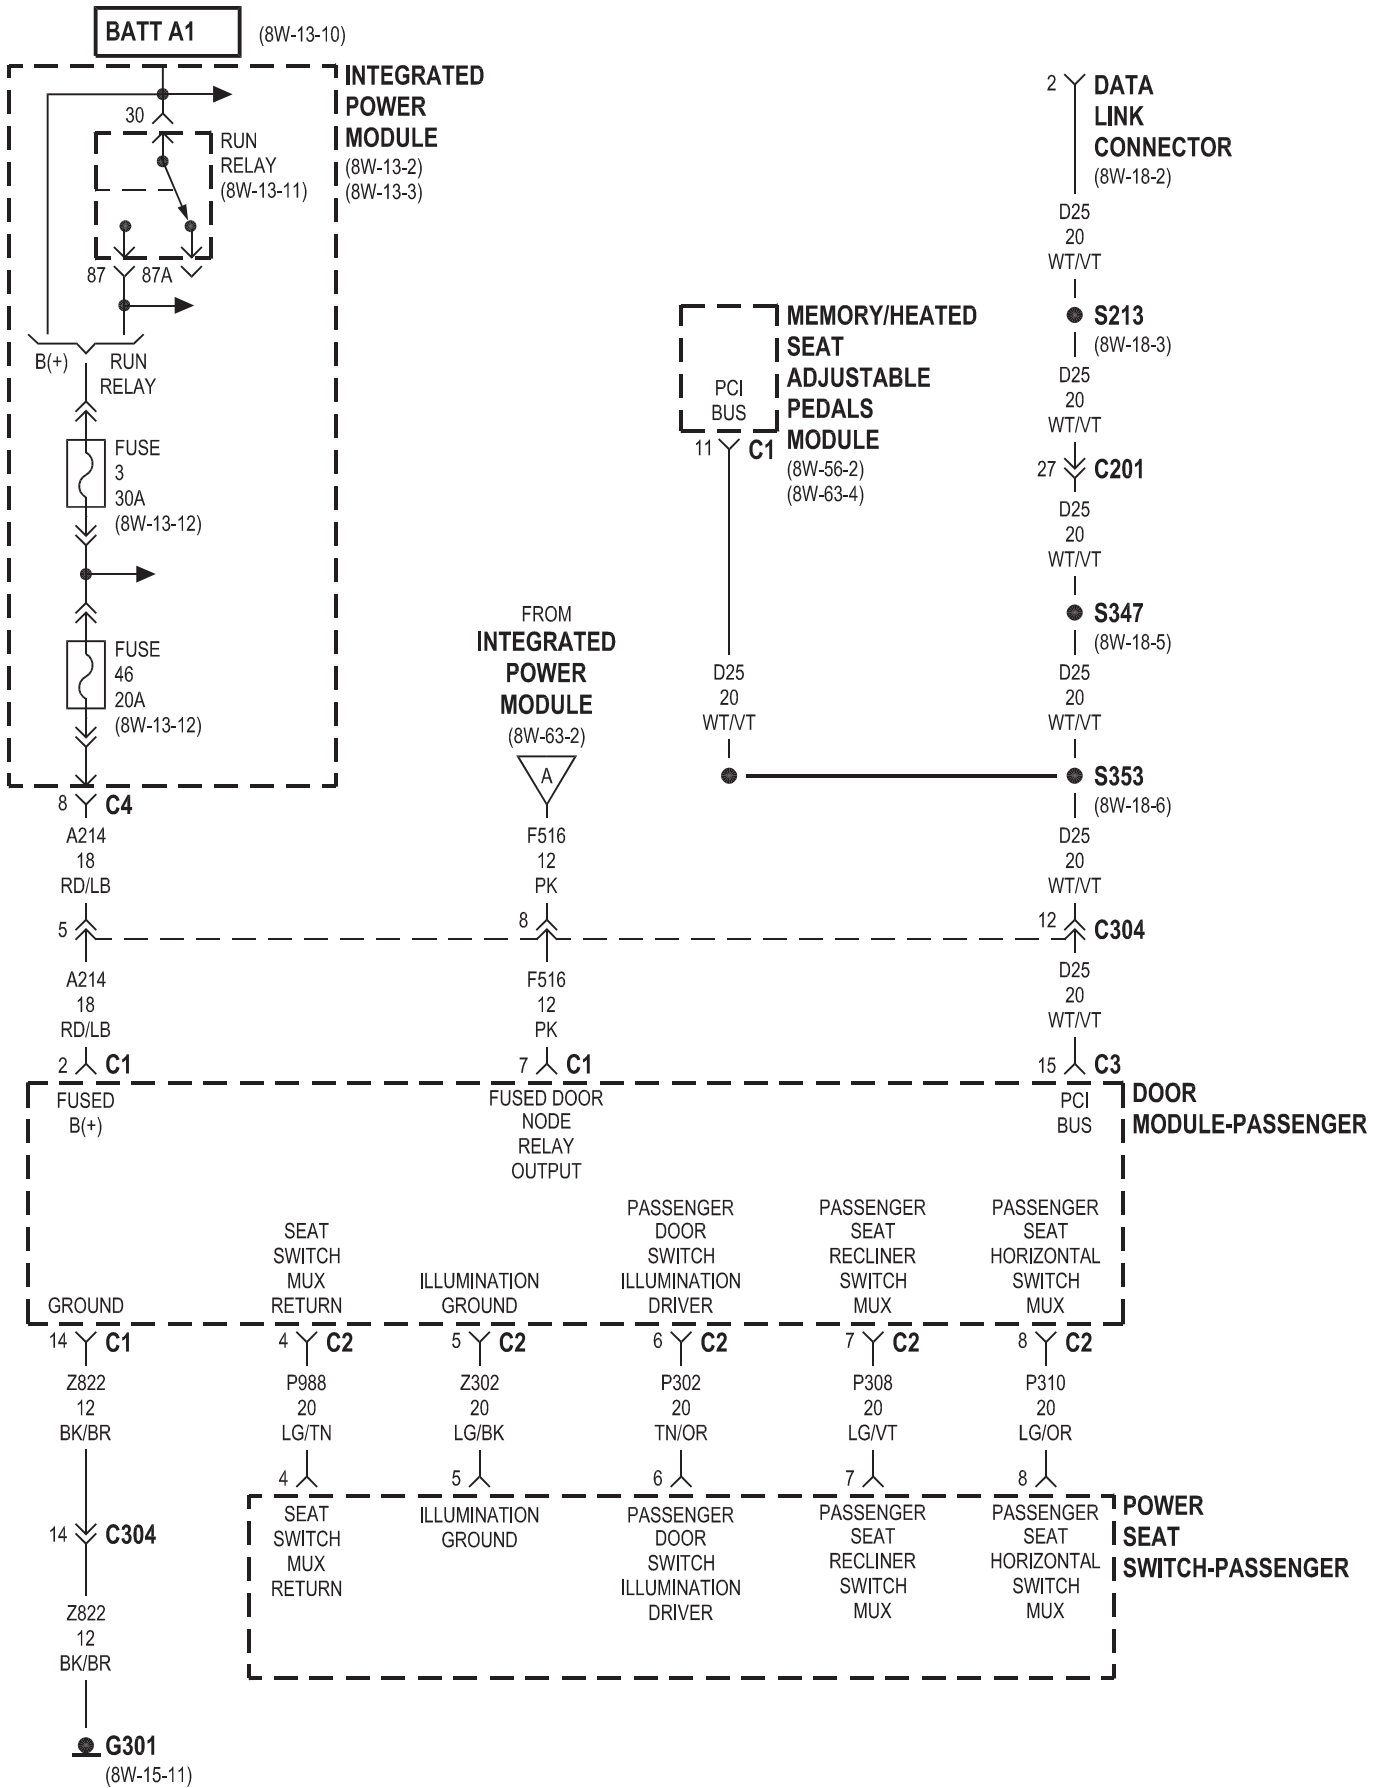


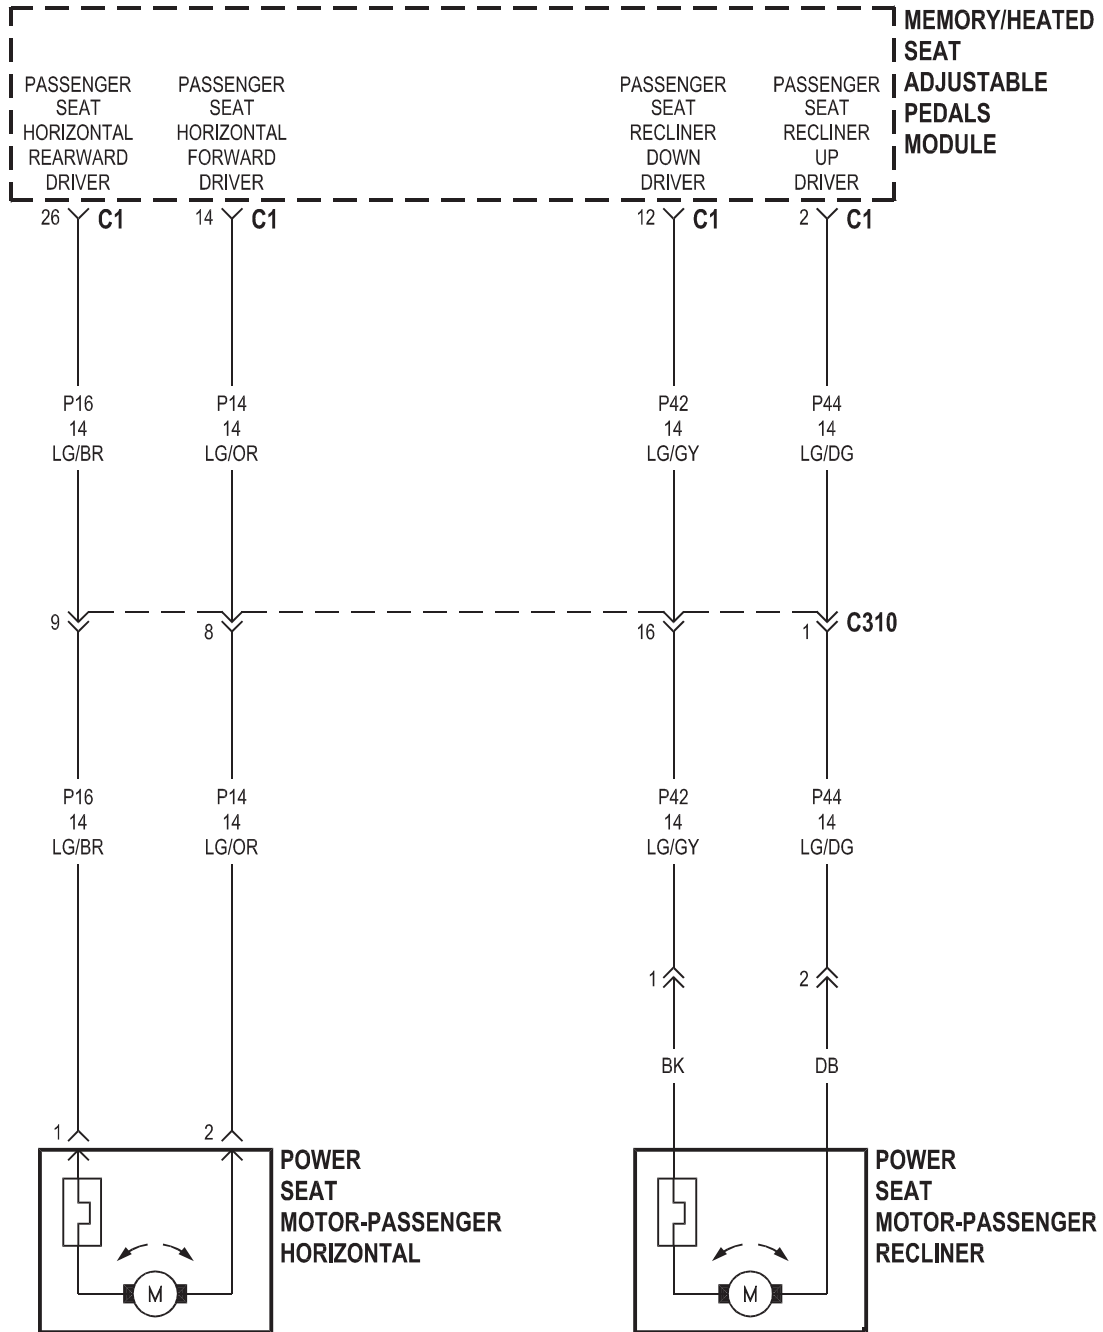





**HEATED SEATS-FRONT ROW**

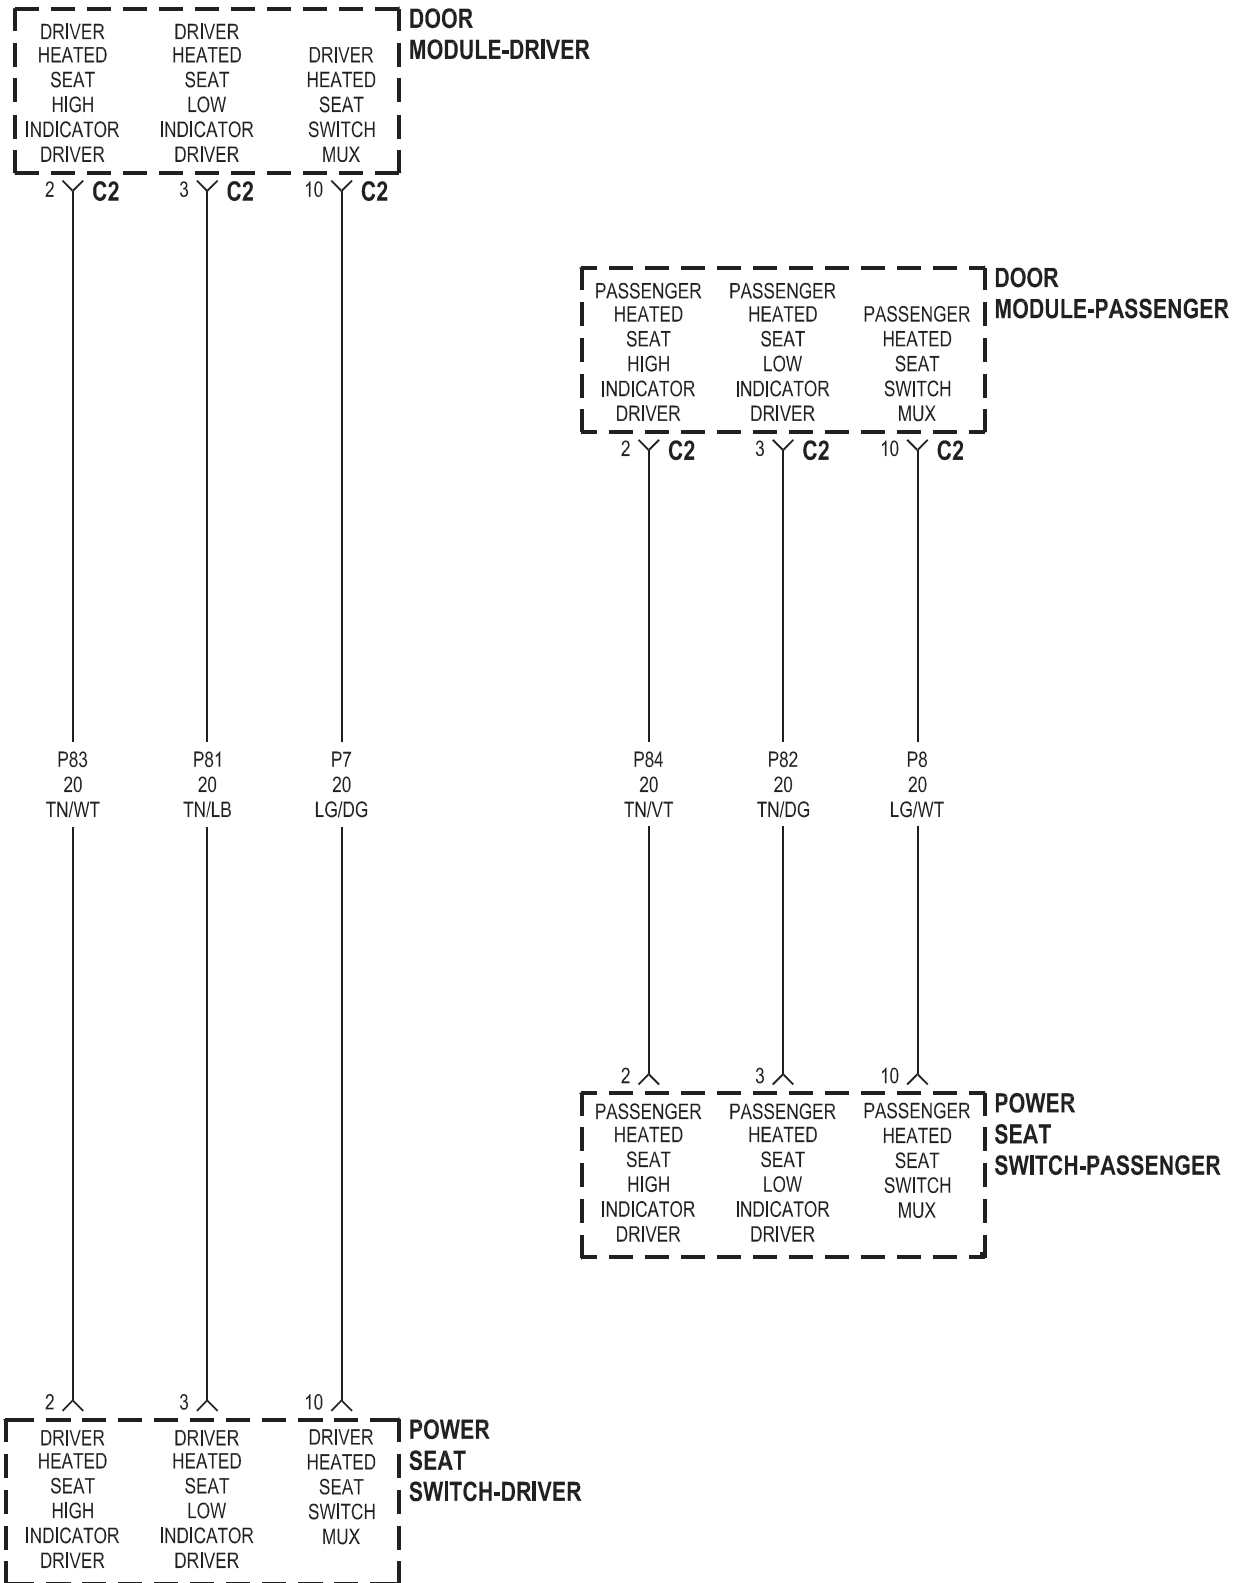

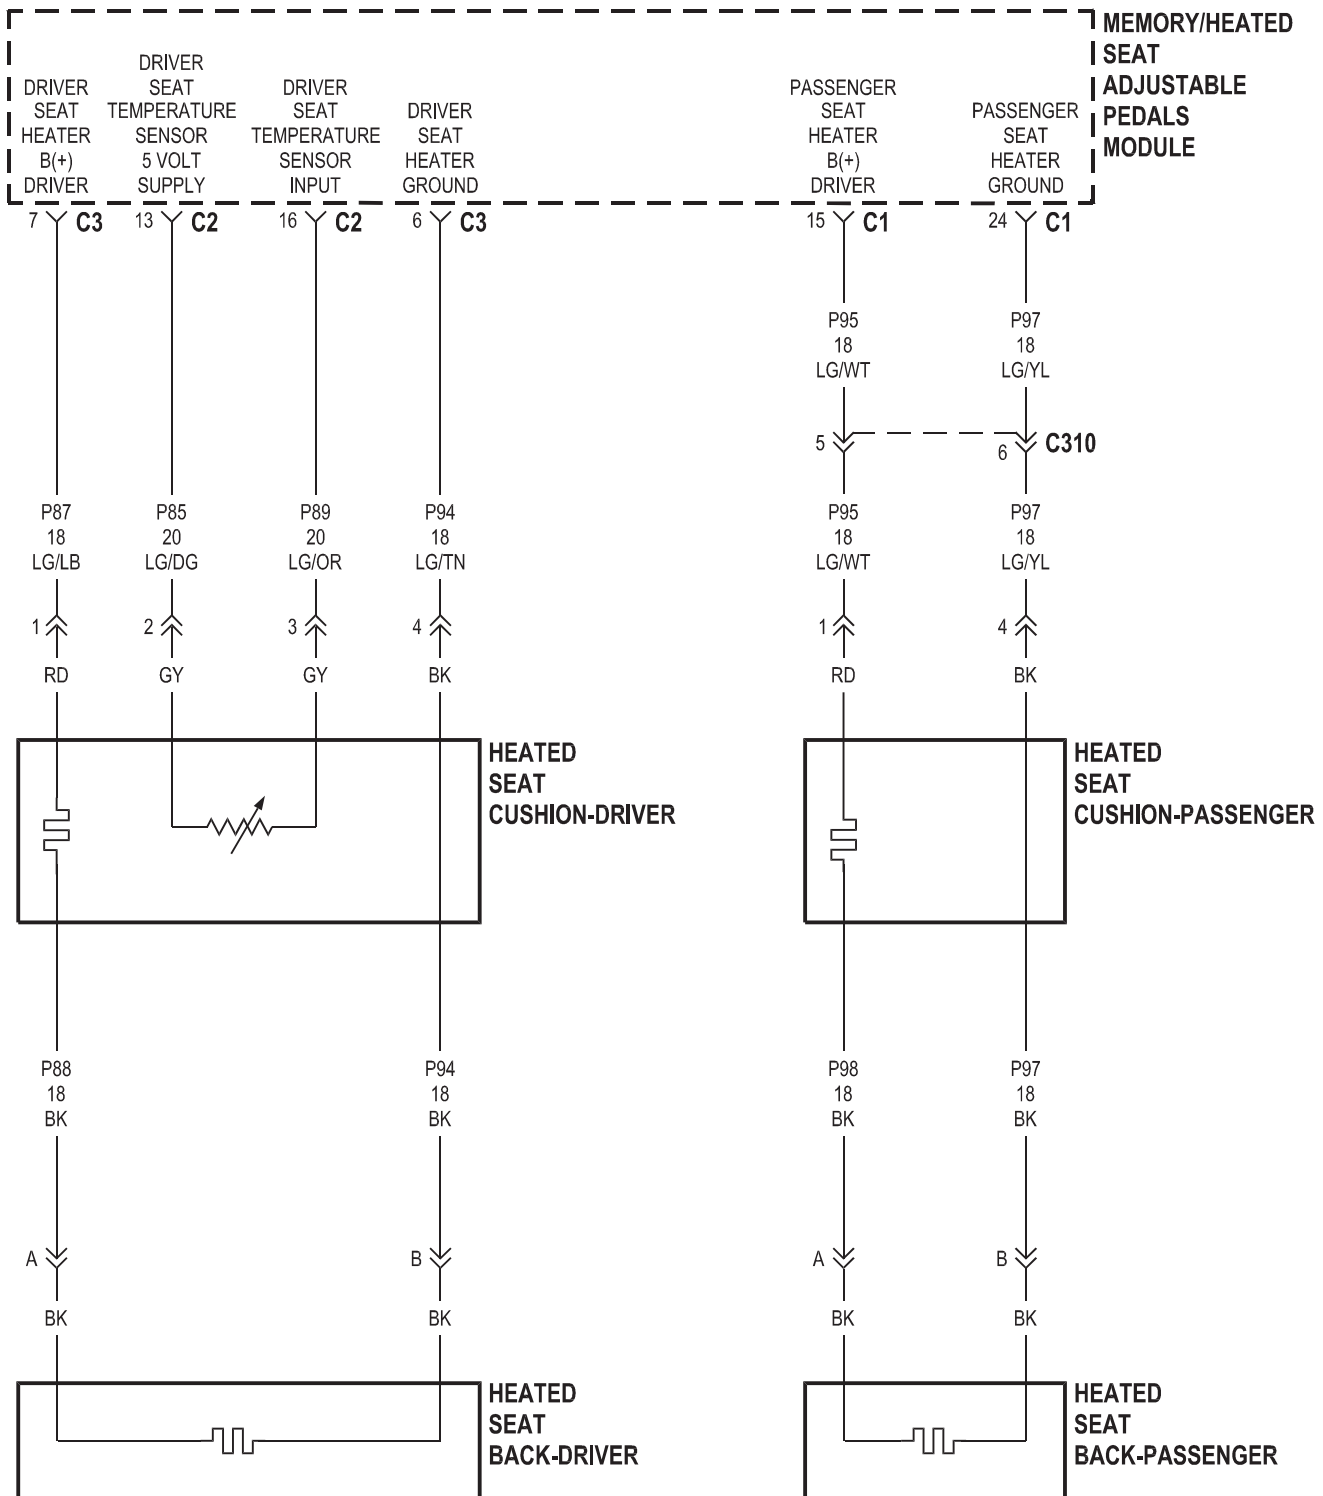

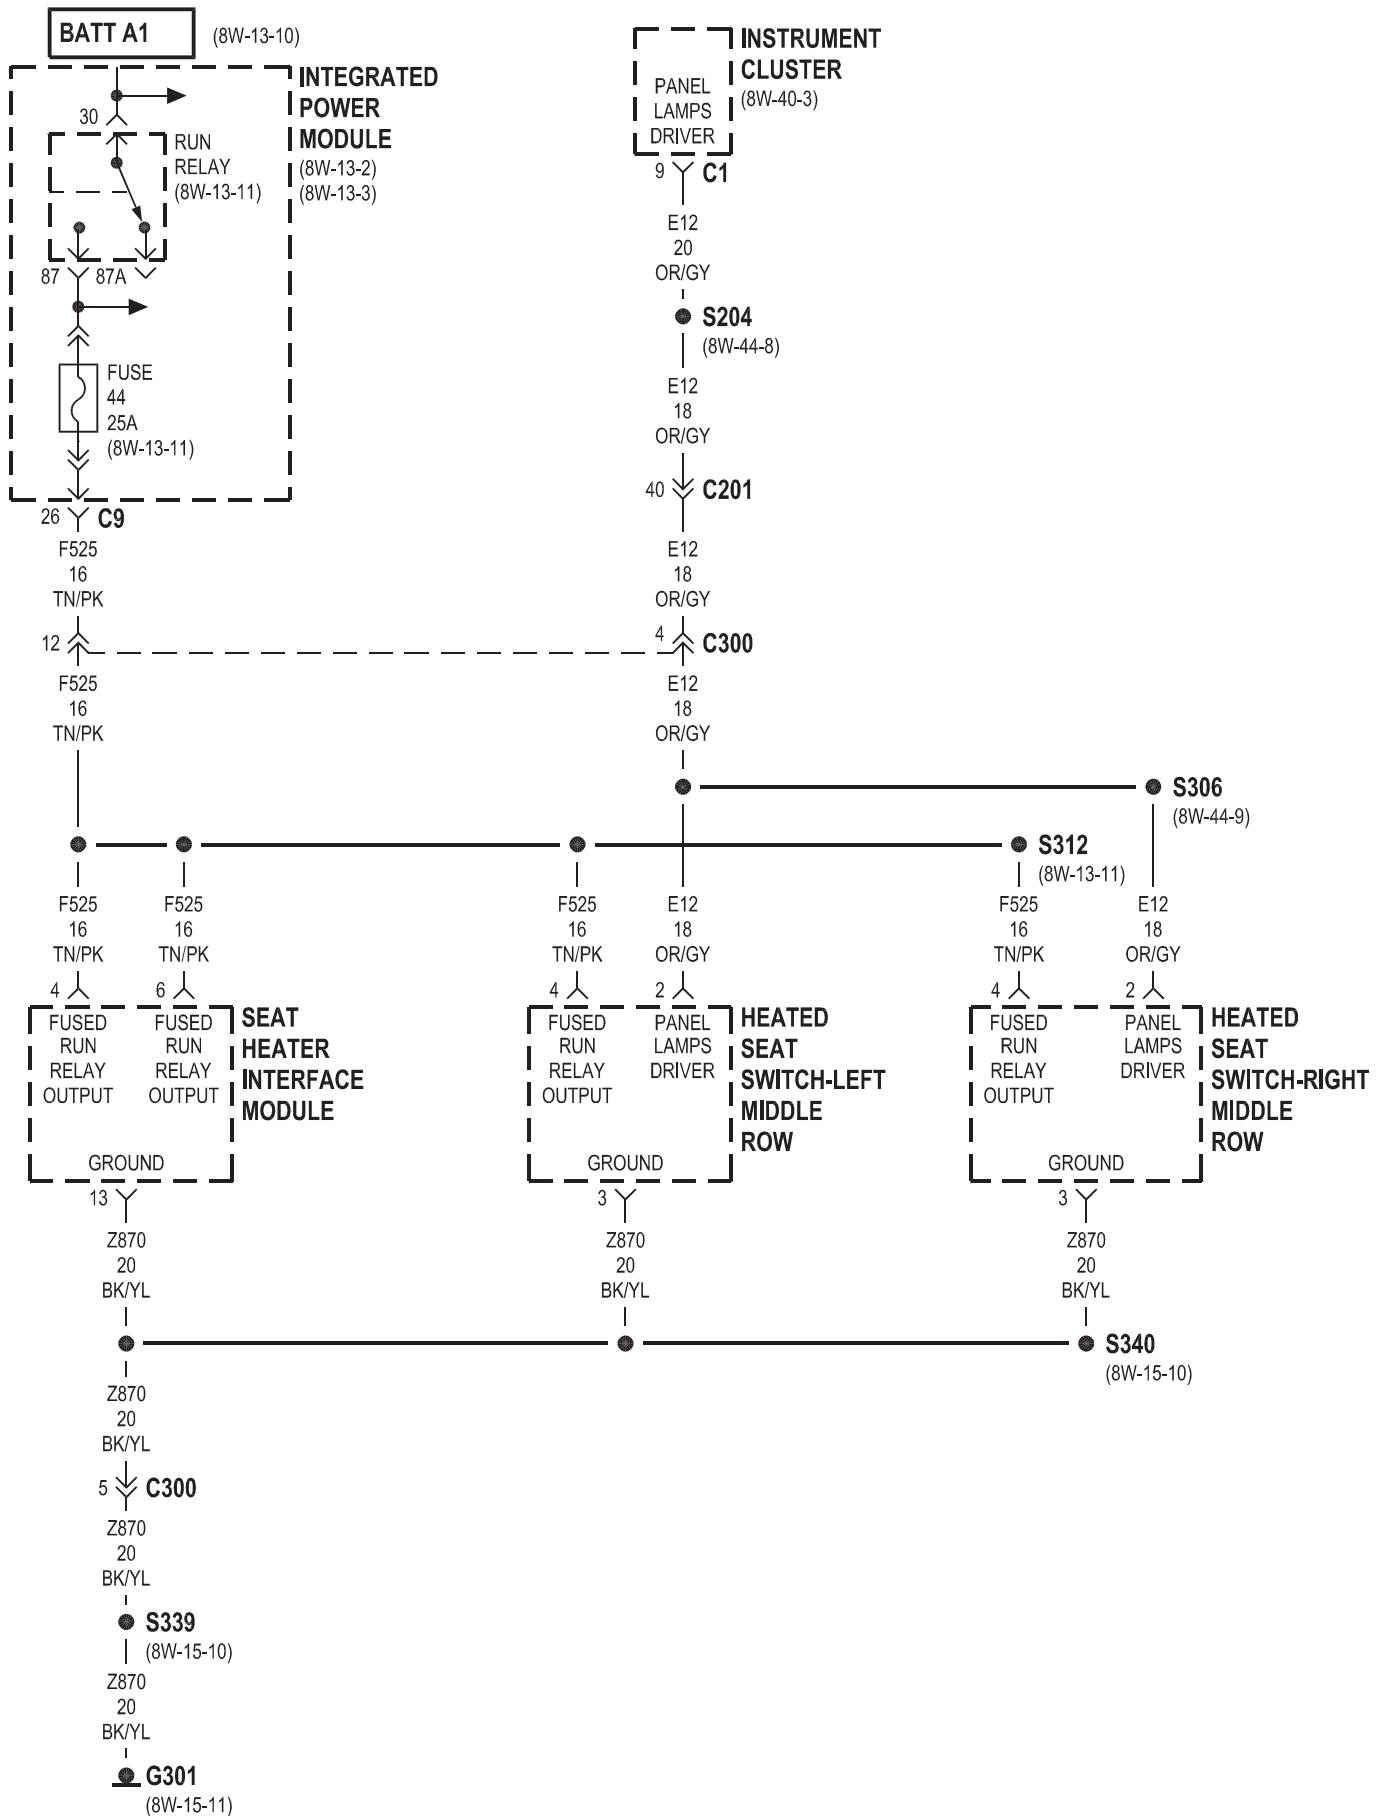

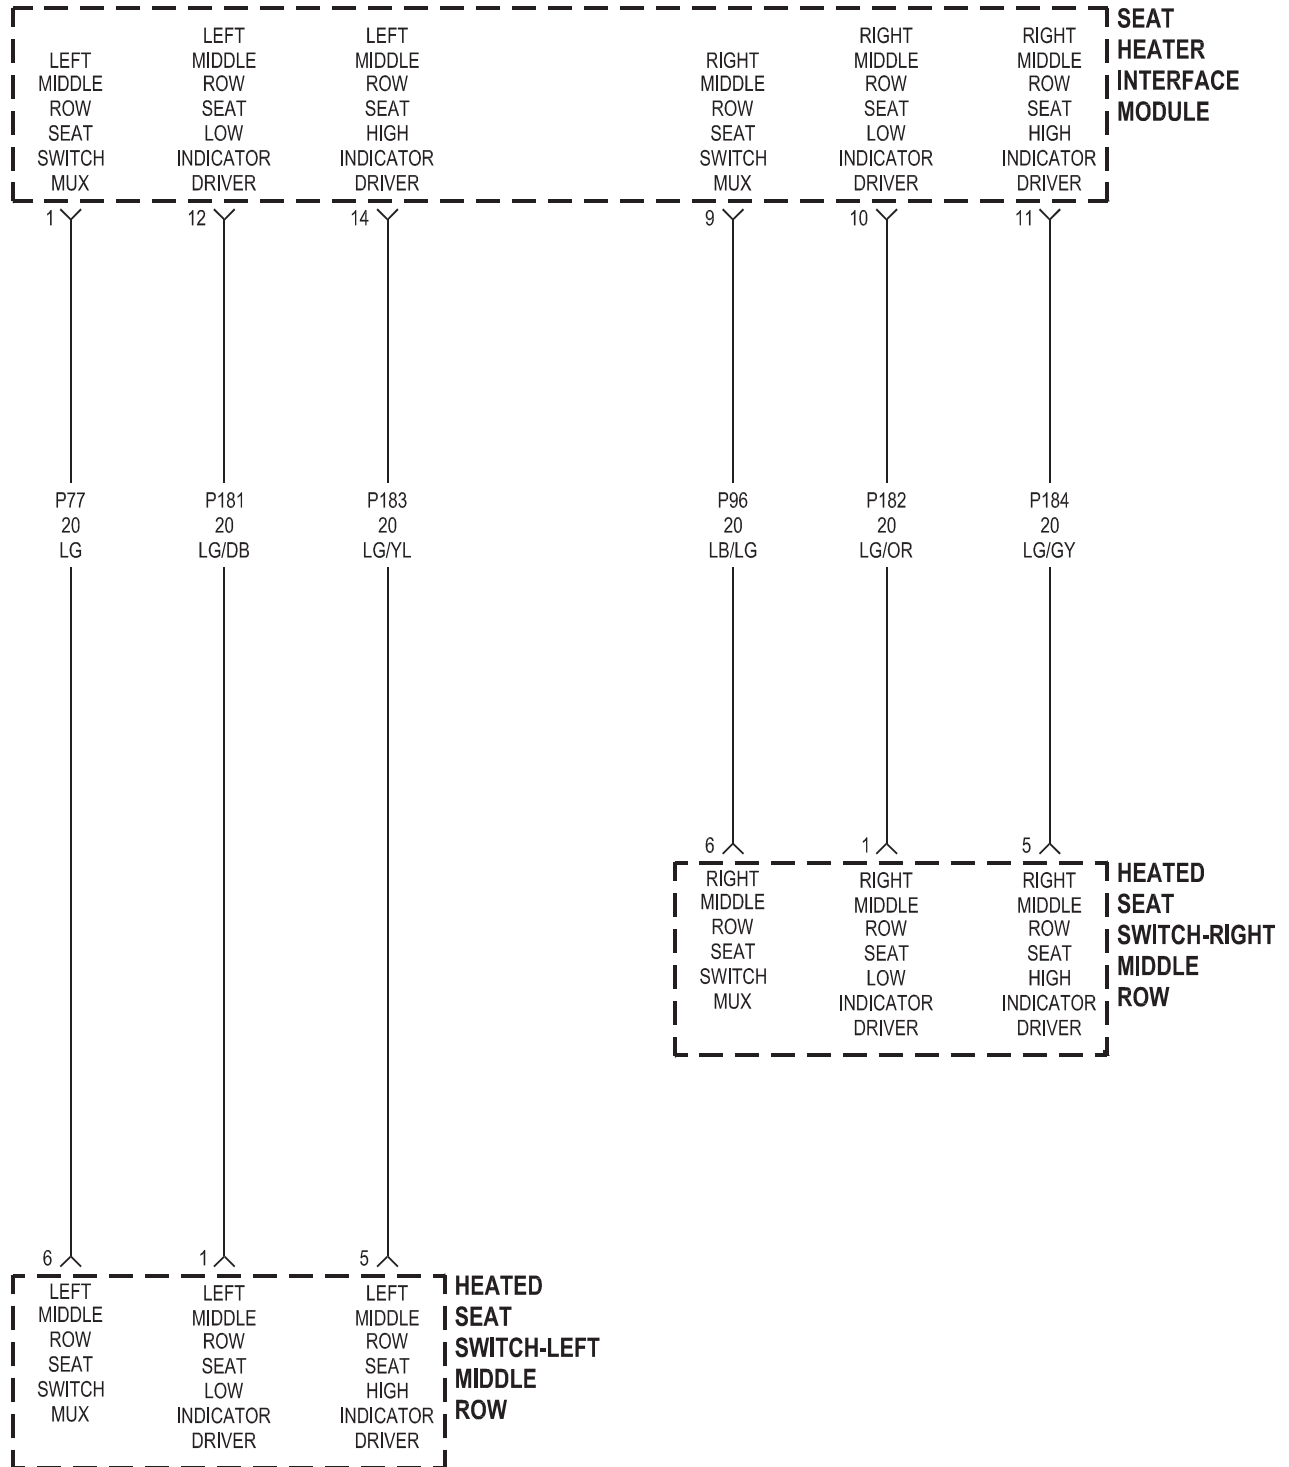

**HEATED SEATS-MIDDLE ROW**

