

8W-30 FUEL/IGNITION SYSTEM

Component	Page
A/C Compressor Clutch Relay	8W-30-4
A/C Pressure Transducer	8W-30-10
Ambient Temperature Sensor	8W-30-13, 19
→ Auto Shut Down Relay	8W-30-4
Battery	8W-30-2, 21
Battery Temperature Sensor	8W-30-13, 19
Body Control Module	8W-30-9
Brake Lamp Switch	8W-30-20
Camshaft Position Sensor	8W-30-14, 18
Clockspring	8W-30-9
Coil On Plug No. 1	8W-30-6
Coil On Plug No. 2	8W-30-5
Coil On Plug No. 3	8W-30-6
Coil On Plug No. 4	8W-30-7
Coil On Plug No. 5	8W-30-7
Coil On Plug No. 6	8W-30-6
Crankshaft Position Sensor	8W-30-13, 19
Data Link Connector	8W-30-3
EGR Solenoid	8W-30-12, 17
Engine Coolant Temperature Sensor	8W-30-12, 17
Engine Oil Pressure Switch	8W-30-10
EVAP/Purge Solenoid	8W-30-4
Fuel Injector No. 1	8W-30-5, 15
Fuel Injector No. 2	8W-30-7, 15
Fuel Injector No. 3	8W-30-7, 15
Fuel Injector No. 4	8W-30-7, 15
Fuel Injector No. 5	8W-30-5, 15
Fuel Injector No. 6	8W-30-5, 15
Fuel Pump Module	8W-30-9
Fuel Pump Relay	8W-30-9
Fuse 29	8W-30-20
Fuse 36	8W-30-21
Fuse 37	8W-30-4
Fuse 38	8W-30-11
Fuse 39	8W-30-2, 9
G100	8W-30-8, 11, 12
G101	8W-30-2, 21
G102	8W-30-2, 8, 17

Component	Page
G103	8W-30-20
G301	8W-30-9, 10
G305	8W-30-9, 20
Generator	8W-30-4
Idle Air Control Motor	8W-30-11
Ignition Coil	8W-30-15, 16
Instrument Cluster	8W-30-20
Intake Air Temperature Sensor	8W-30-14, 18
Integrated Power Module	8W-30-2, 3, 4, 9, 11, 20, 21
Knock Sensor	8W-30-11
Manifold Absolute Pressure Sensor	8W-30-12, 17
Manifold Tuning Valve Relay	8W-30-11
Manifold Tuning Valve Solenoid	8W-30-11
Natural Vacuum Leak Detection Assembly	8W-30-10
Noise Suppressor	8W-30-7
Oxygen Sensor-1/1 Upstream	8W-30-8
Oxygen Sensor-1/2 Downstream	8W-30-8
Powertrain Control Module	8W-30-2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22
Radiator Fan Relay	8W-30-10
Shift Lever Assembly	8W-30-4
Short Runner Valve Solenoid	8W-30-5
Speed Control Servo	8W-30-20
Speed Control Switch-Left	8W-30-9
Speed Control Switch-Right	8W-30-9
Speed Sensor-Input	8W-30-21
Speed Sensor-Output	8W-30-21
Starter Motor Relay	8W-30-9
Throttle Position Sensor	8W-30-14, 18
Transmission Control Relay	8W-30-21
Transmission Range Sensor	8W-30-22
Transmission Solenoid/Pressure Switch Assembly	8W-30-21, 22









































