

PRODEMAND

YMMS: 2008 Chrysler Aspen Limited

Engine: 5.7L Eng

VIN:

Dec 22,
2019

License:


Odometer:

MODULE-POWER-BLOWER MOTOR

WARNING: *On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.*

WARNING: *The heat sink for the blower motor power module may get very hot during normal operation. If the blower motor was turned on prior to servicing the blower motor power module, wait five minutes to allow the heat sink to cool before performing diagnosis or service. Failure to take this precaution can result in possible personal injury.*


Fig 2: Locating Screws Securing Trim Cover

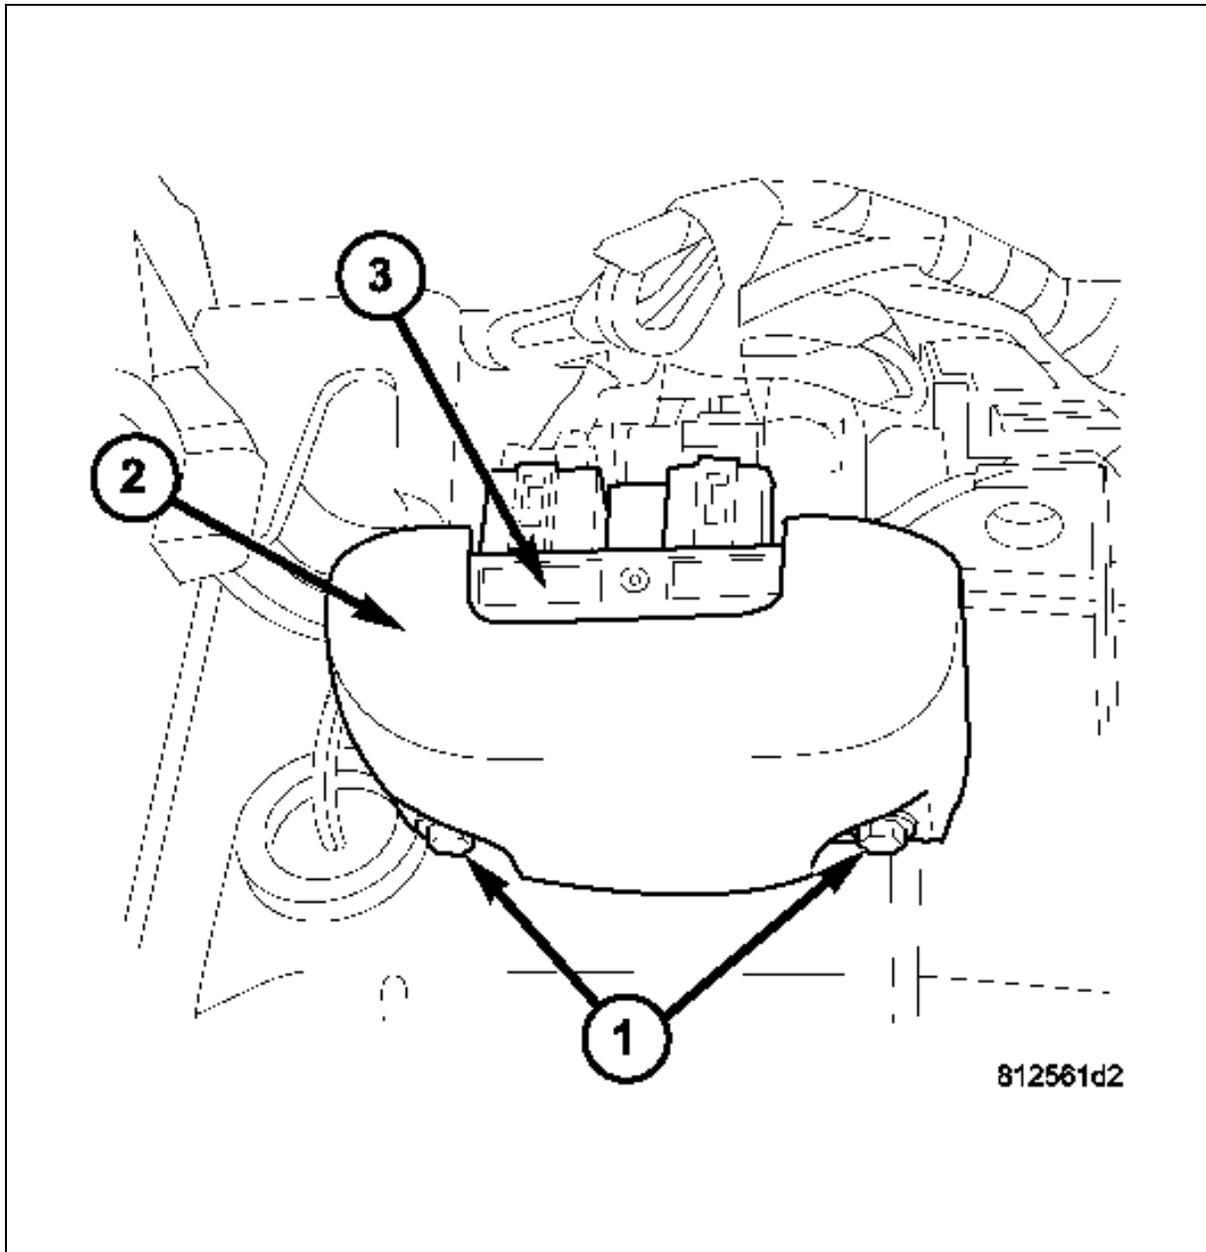

Courtesy of CHRYSLER LLC

1. Disconnect and isolate the negative battery cable.
2. If equipped with a trim cover (2), remove the two screws (1) that secure the trim cover over the blower motor power module (3) located below the right side of the instrument panel and remove the cover.

Fig 3: Identifying Wire Harness Connectors, Blower Motor Power Module, Screws, And HVAC Housing

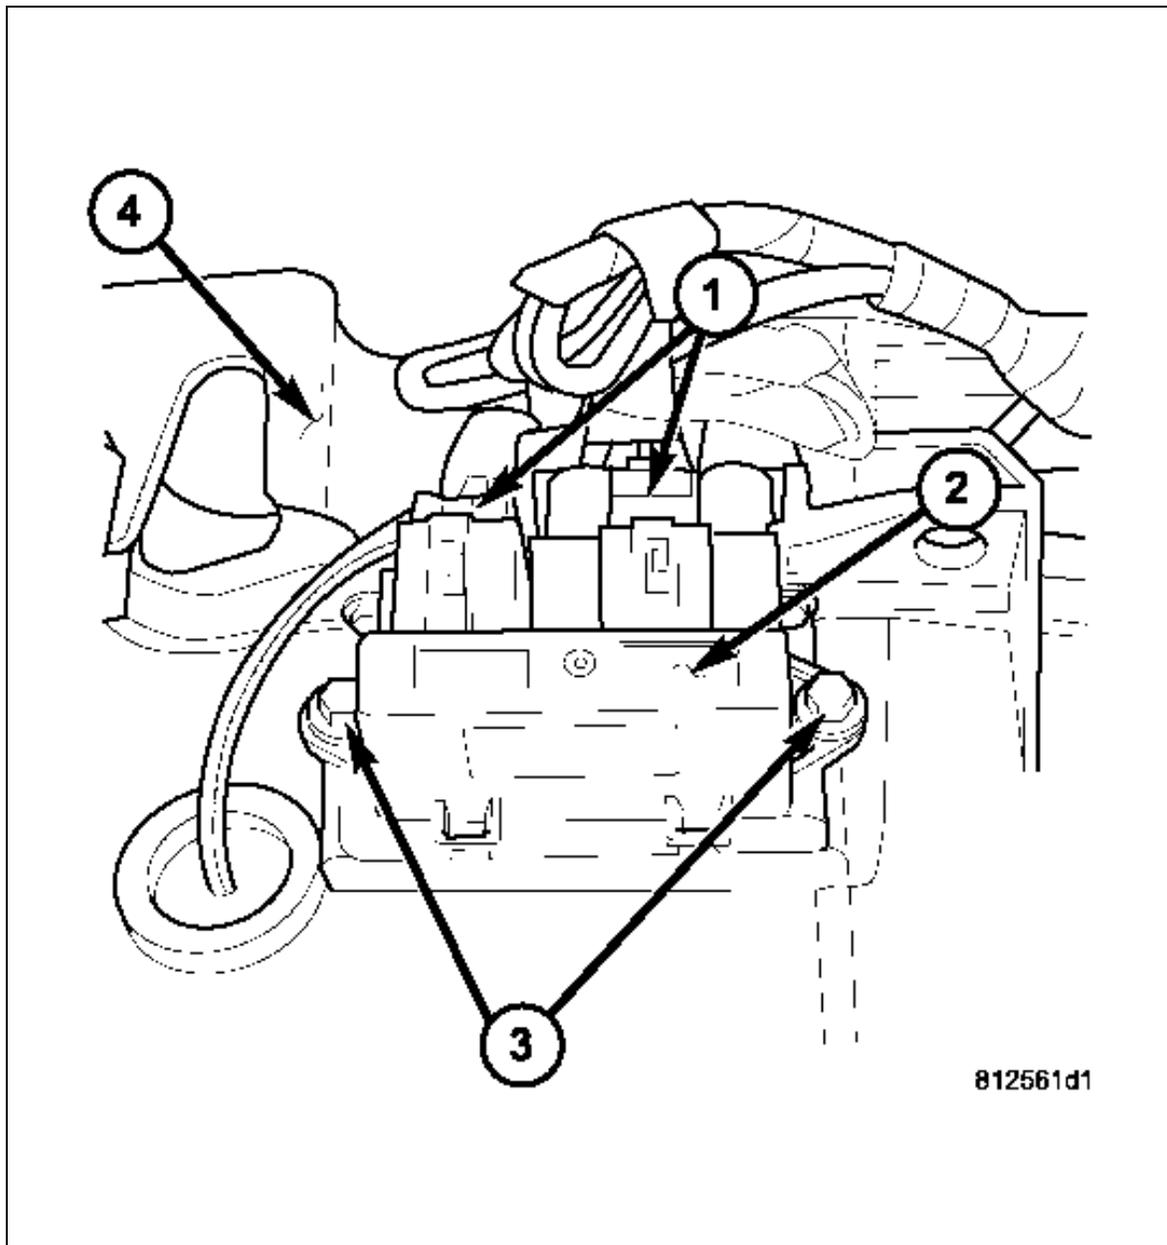

Courtesy of CHRYSLER LLC

3. Disconnect the two wire harness connectors (1) from the blower motor power module (2).
4. Remove the two screws (3) that secure the blower motor power module to the front HVAC housing (4).
5. Remove the blower motor power module from the front HVAC housing.